

7.3 Frequenzen (HF), Kanaltabelle

Band 433MHz	Dip-Switch Setting	Channel
433.075 MHz	00000001	01
433.100 MHz	00000010	02
433.125 MHz	00000011	03
433.150 MHz	00000100	04
433.175 MHz	00000101	05
433.200 MHz	00000110	06
433.225 MHz	00000111	07
433.250 MHz	00001000	08
433.275 MHz	00001001	09
433.300 MHz	00001010	10
433.325 MHz	00001011	11
433.350 MHz	00001100	12
433.375 MHz	00001101	13
433.400 MHz	00001110	14
433.425 MHz	00001111	15
433.450 MHz	00010000	16
433.475 MHz	00010001	17
433.500 MHz	00010010	18
433.525 MHz	00010011	19
433.550 MHz	00010100	20
433.575 MHz	00010101	21
433.600 MHz	00010110	22
433.625 MHz	00010111	23
433.650 MHz	00011000	24
433.675 MHz	00011001	25
433.700 MHz	00011010	26
433.725 MHz	00011011	27
433.750 MHz	00011100	28
433.775 MHz	00011101	29
433.800 MHz	00011110	30
433.825 MHz	00011111	31
433.850 MHz	00100000	32
433.875 MHz	00100001	33
433.900 MHz	00100010	34

Band 433MHz	Dip-Switch Setting	Channel
434.425 MHz	00100011	35
434.450 MHz	00100100	36
434.475 MHz	00100101	37
434.500 MHz	00100110	38
434.525 MHz	00100111	39
434.550 MHz	00101000	40
434.575 MHz	00101001	41
434.600 MHz	00101010	42
434.625 MHz	00101011	43
434.650 MHz	00101100	44
434.675 MHz	00101101	45
434.700 MHz	00101110	46
434.725 MHz	00101111	47
434.750 MHz	00110000	48
434.775 MHz	00110001	49
433.325 MHz	00110010	50
433.350 MHz	00110011	51
433.375 MHz	00110100	52
433.400 MHz	00110101	53
433.425 MHz	00110110	54
433.450 MHz	00110111	55
433.475 MHz	00111000	56
433.500 MHz	00111001	57
433.525 MHz	00111010	58
433.550 MHz	00111011	59
433.575 MHz	00111100	60
433.600 MHz	00111101	61
433.625 MHz	00111110	62
433.650 MHz	00111111	63
433.675 MHz	01000000	64
433.700 MHz	01000001	65
433.725 MHz	01000010	66
433.750 MHz	01000011	67
433.775 MHz	01000100	68